



CANBUILT MFG.

Toll-Free in Canada: 1-888-607-2926 Phone: 416-749-6555 Fax: 416-749-7597
 Email: sales@canbuilt.com Website: www.canbuilt.com

103 Milvan Drive,
 Toronto, Ontario,
 Canada, M9L 1Z7

 
MULTIFUNCTIONAL LIFTING SYSTEM




Canbuilt Arm Base Configuration **Model # 5200** Capacity up to 1500 Lbs

- The Lift System can be dressed with options and setup to perform a wide variety of lift applications
- Flow through base allows legs to be telescoped backwards
- Dual Control: Air/Manual Hydraulics with upgraded lever release for absolute hydraulic control

Boom Position	Capacity
1 Fully Retracted	1500 Lbs
2 Mid Extension	800 Lbs
3 Max Extension	600 Lbs

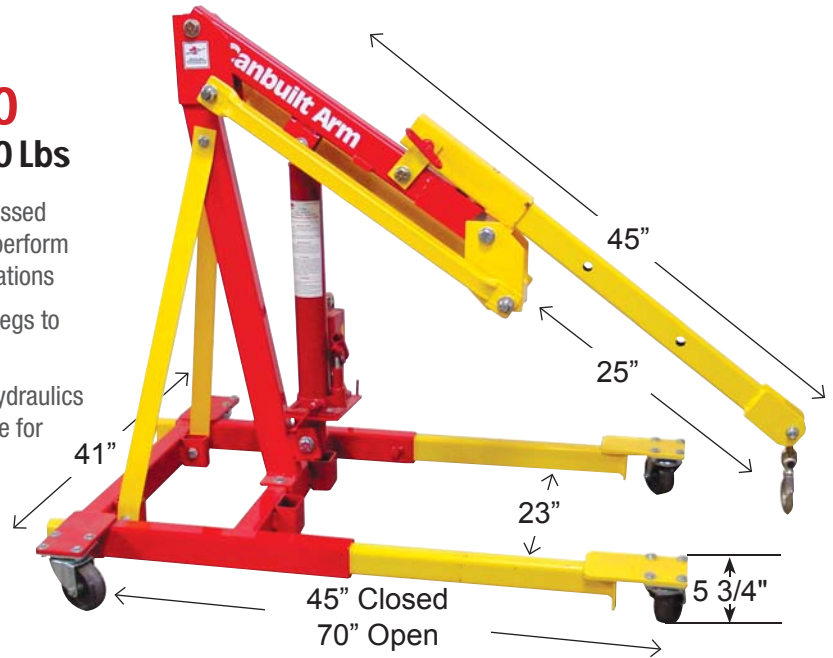

 Quick change FLIP-OVER Tool holder
 Using the FLIP-OVER TOOL HOLDER, change from Standard Crane to Power Arm or to Horizontal Lift.

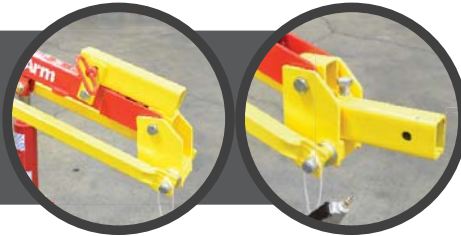


Articulating Leveling Platform Model # 5250

Boom Position	Capacity
1 Max. Extension	800 Lbs



 
Counter Balance Model # 5280

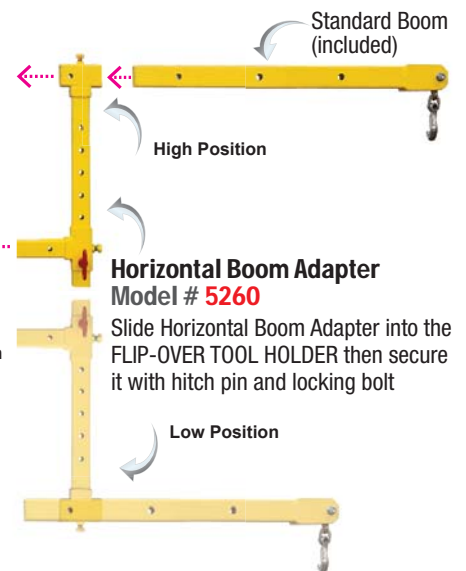

Horizontal Boom Adapter Model # 5260
 Slide Horizontal Boom Adapter into the FLIP-OVER TOOL HOLDER then secure it with hitch pin and locking bolt


Boom Position	Capacity
1 Fully Retracted	800 Lbs
2 Mid Extension	600 Lbs
3 Max Extension	400 Lbs

 OPTIONAL ADAPTERS FOR 5200 LIFTING SYSTEM

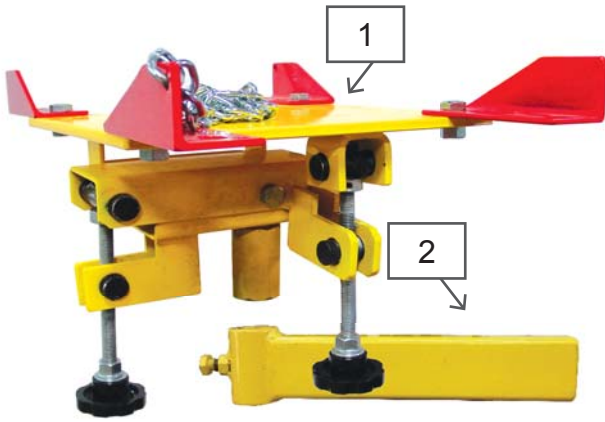

2 Piece Articulating Leveling Platform for 5200
Model # 5250

 1. Articulating Leveling Platform
 2. Adapter for Flip-Over-Tool
- Fully articulated manipulator platform designed for one handed side to side, fore / aft tilt adjustments
 - Complete with corner adjustable brackets, tie down chain and hardware to secure the load

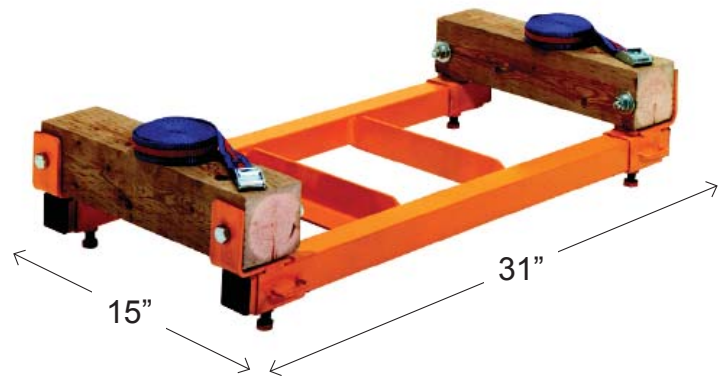

Trans axle, Gas tank Adapter
Model # LS-1000

- Bolts up to transmission plate
- adapter on Model # 5250
- c/w ratcheting tie down straps
- 31" x 15" wide
- 9 3/4" adjustment slide per side

This adapter works in conjunction with the Articulating Leveling Platform **Model # 5250**

Shown Base Model # 5200 Lifting System with optionals: Horizontal Boom Adapter, Counterbalance and Skid Spreader



100lbs Counter Balance
Model # 5280

Counterbalance provides the ability to lift when the lift point is extended past the front wheels. Apply on base or the back of legs as shown below. Multiple counterbalance units can be used as needed



2 Piece Horizontal Boom Adapter
Model # 5260

1. Adapter for Flip-Over-Tool
2. Height Adapter

Boom and Hook come standard in base configuration 5200

Skid Spreader
Model # 3200SSL

- Skid spreader reduces all capacity by 20%
- Increases stability